Service Manual Trucks


Group 37


Electrical Schematic: Sink and Pump

VN 770


From Build Date 9/98



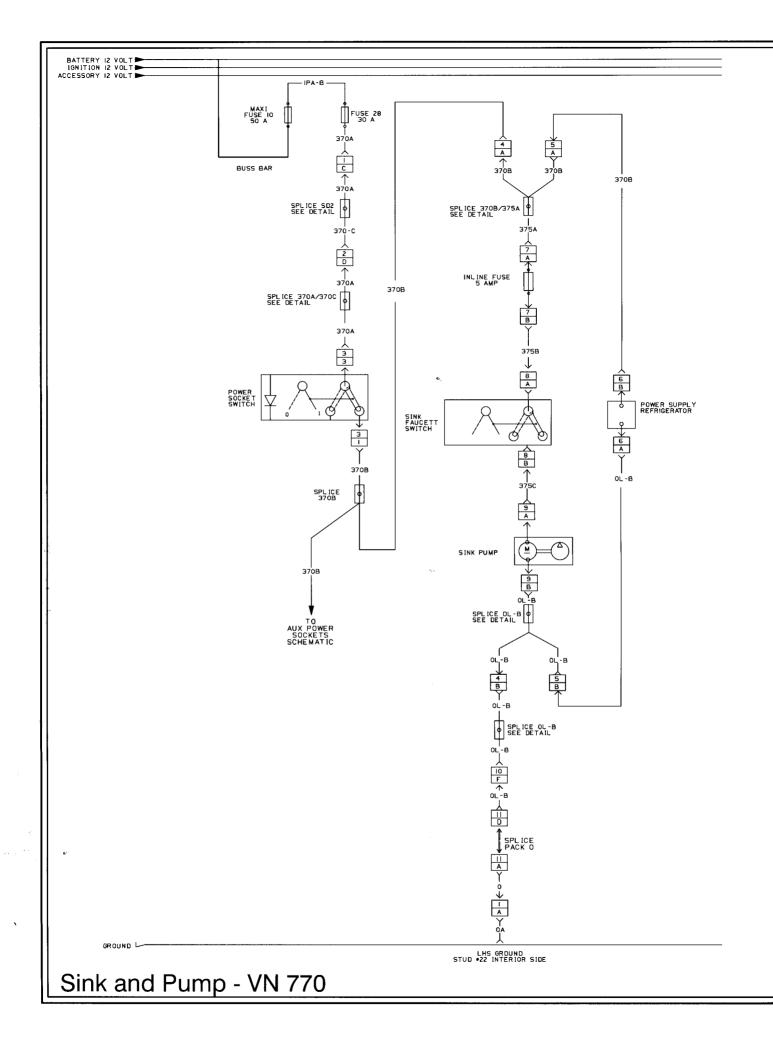

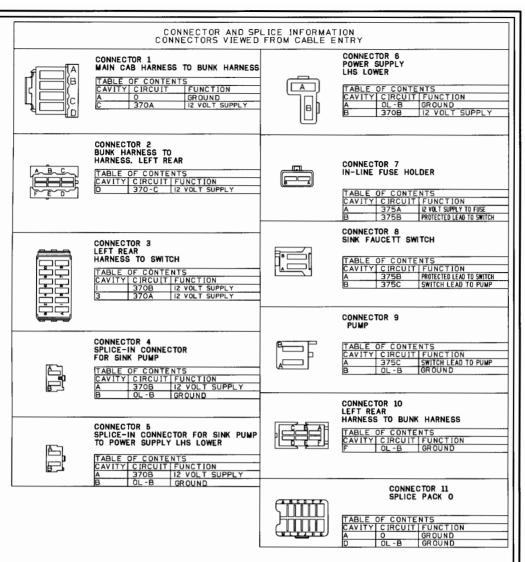

POWER SOCKET SWITCH	POWER SUPPLY LHS UPPER POWER SUPPLY LHS LOWER	LEFT REAR HARNESS - OPTION CONNECTOR - RIGHT REAR HARNESS -	· \
SPLICE 370B LEFT REAR HARNESS)	VEHICLE LOCATION: BEHIND SLEEPER CONTROL PANEL	SPLICE SD2	VEHICLE LOCATION: MAIN TRUNK BUNK HARNESS
POWER SUPPLY CONTROL FAMEL POWER SOCKET SW CIGARETTE LIGHTER		LEFT REAR FUSE HOLDER	
SPLICE 370A/370C	VEHICLE LOCATION: BEHIND SLEEPER CONTROL PANEL	SPLICE 370B/375A	VEHICLE LOCATION: DRIVER SIDE TOWER CABINET, BEHIND DRAWER
POWER SUPPLY LHS LOWER POWER SUPPLY LHS LOWER POWER SUPPLY SLEEPER CONTROL PANEL BUNK HARNESS		SINK PUMP	
	VEHICLE LOCATION: BEHIND SLEEPER CONTROL PANEL	► LEFT REAR	
1		SPLICE OL-B (HARNESS, SINK/FAU)	VEHICLE LOCATION: DRIVER SIDE TOWER CABINET, BEHIND DRAWER

 

V370830 Schematic #8085868.04

	CHANGE	HISTOR
EFFECTIVE DATE	DESCRIPTION	

