

Service Manual Trucks


Group **37**

Electrical Schematic:

Air Dryer,
CR/Midland


VNL, VNM

From Build Date 2.98

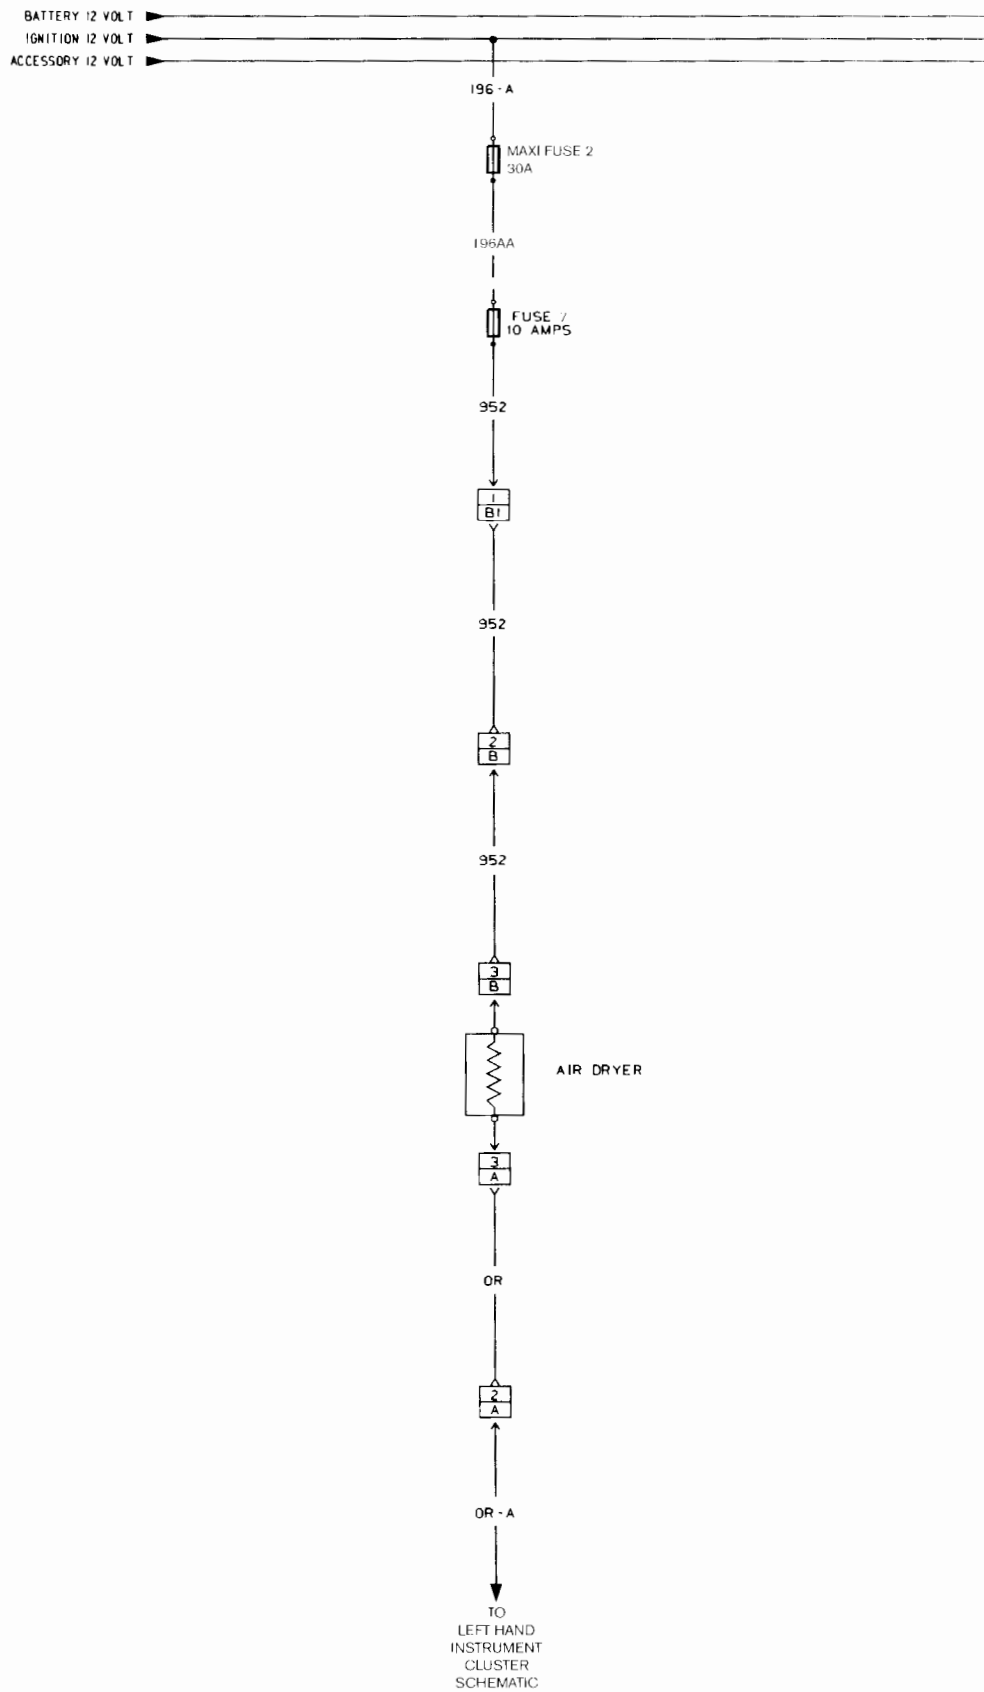

Air Dryer, CR/Midland - VNL, VNM

CONNECT OR AND SPLICE INFORMATION
CONNECTORS VIEWED FROM CABLE ENTRY

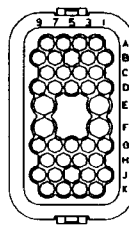

CONNECTOR 1
CHASSIS HARNESS PASS THROUGH

TABLE OF CONTENTS

CAVITY	CIRCUIT	FUNCTION
B1	952	12 VOLT SUPPLY



CONNECTOR 2
CHASSIS HARNESS TO AIR DRYER

TABLE OF CONTENTS

CAVITY	CIRCUIT	FUNCTION
A	OR - A	GROUND
B	952	12 VOLT SUPPLY





CONNECTOR 3
AIR DRYER

TABLE OF CONTENTS

CAVITY	CIRCUIT	FUNCTION
A	OR	GROUND
B	952	12 VOLT SUPPLY

CHANGE HISTORY

EFFECTIVE DATE	DESCRIPTION

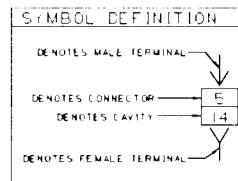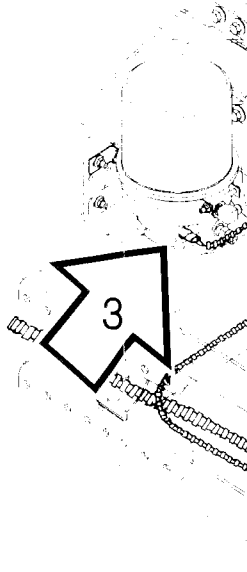

[illegible]