


Service Manual Trucks


Group **37**

Electrical Schematic:
Interior Cab Lamps (front)

VN

From Build Date 5.99

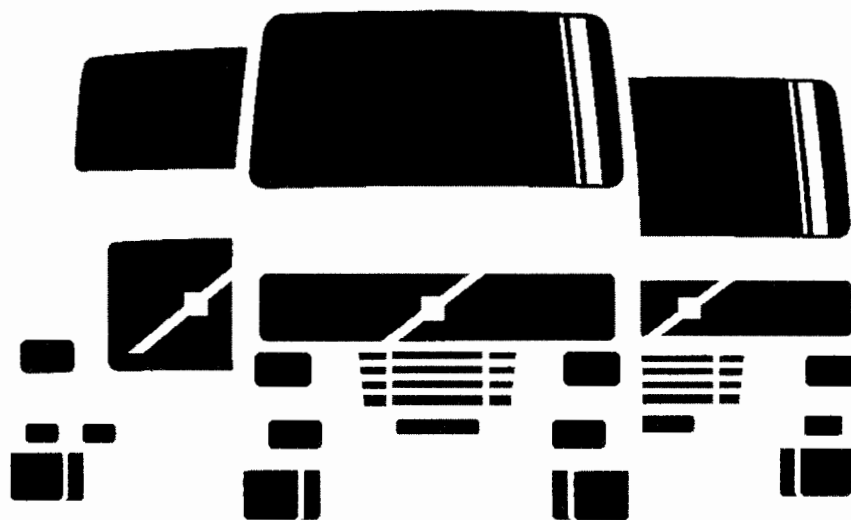

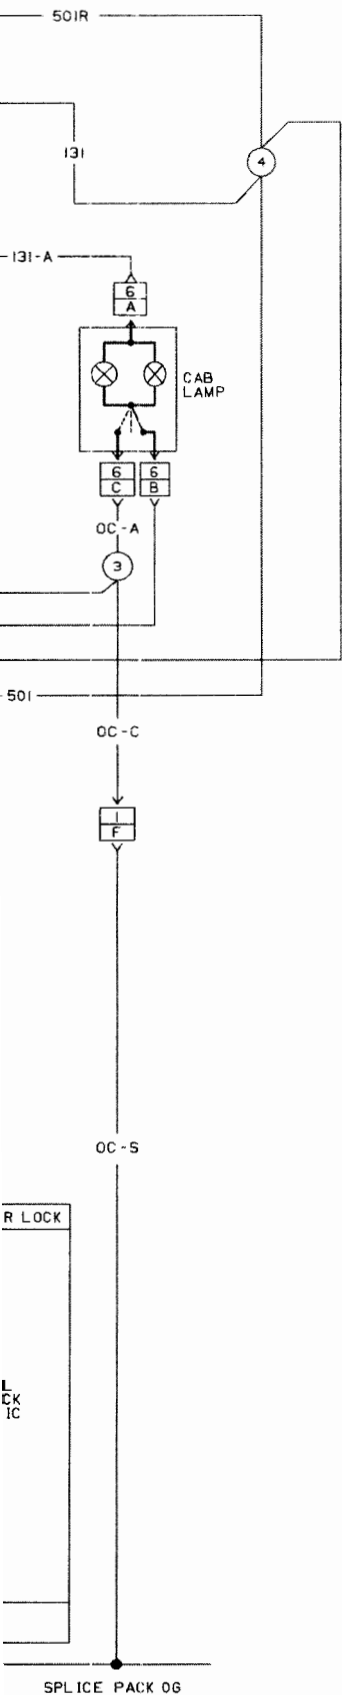

CONNECTOR AND SPLICE INFORMATION
CONNECTORS VIEWED FROM CABLE ENTRY

CONNECTOR 1
CAB TO OVERHEAD LAMPS



TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
B	131	12 VOLT SUPPLY
C	505-B/505A	12 VOLT SUPPLY
F	OC-C	GROUND

CONNECTOR 2
CAB HARNESS TO RHS DOOR HARNESS



TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	501	12 VOLT SUPPLY
B	500R	GROUND RHS DOOR
C	OC-R	GROUND

CONNECTOR 3
CAB HARNESS TO LHS DOOR HARNESS



TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	501	12 VOLT SUPPLY
B	500L	GROUND RHS DOOR
C	OC-L	GROUND

CONNECTOR 4
COURTESY DOOR LAMP RELAY R10

 


TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
66	503	12 VOLT SUPPLY
85	504L/504R	GROUND
87	OR-F	GROUND
30	505	12 VOLT TO OVERHEAD LAMPS

CONNECTOR 5
OVERHEAD CAB LAMP



TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	131-D	12 VOLT SUPPLY
B	505	FROM DOOR LAMP RELAY
C	OC-D	GROUND RHS DOOR

CONNECTOR 6
OVERHEAD CAB LAMP



TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	131-A	12 VOLT SUPPLY
B	505-A	FROM DOOR LAMP RELAY
C	OC-A	GROUND

CONNECTOR 8
LEFT SIDE DOOR LAMP


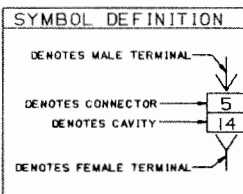


TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	501	12 VOLT SUPPLY
B	500L	GROUND
C	OC/OC-A	GROUND



CONNECTOR 9
RIGHT SIDE DOOR LAMP







TABLE OF CONTENTS		
CAVITY	CIRCUIT	FUNCTION
A	501	12 VOLT SUPPLY
B	500R	GROUND
C	OC/OC-A	GROUND

 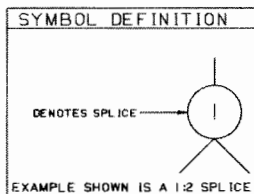


CHANGE	
EFFECTIVE DATE	DESCRIPTION

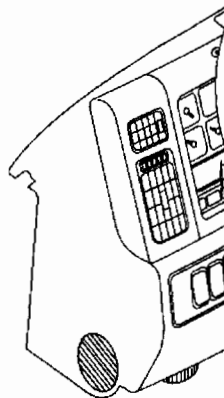


CHANGE HISTORY	
DESCRIPTION	

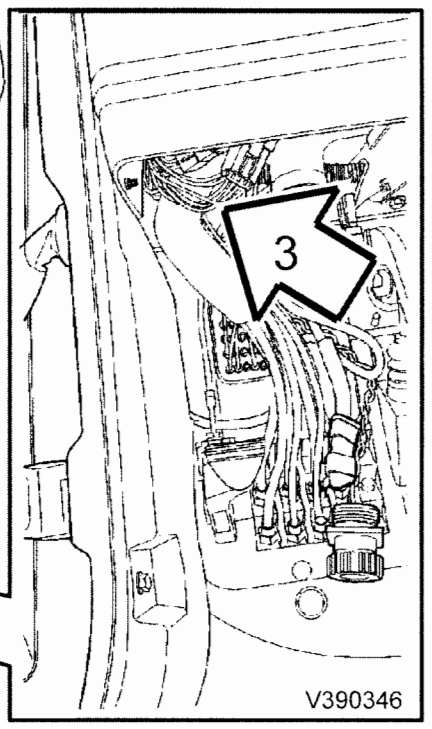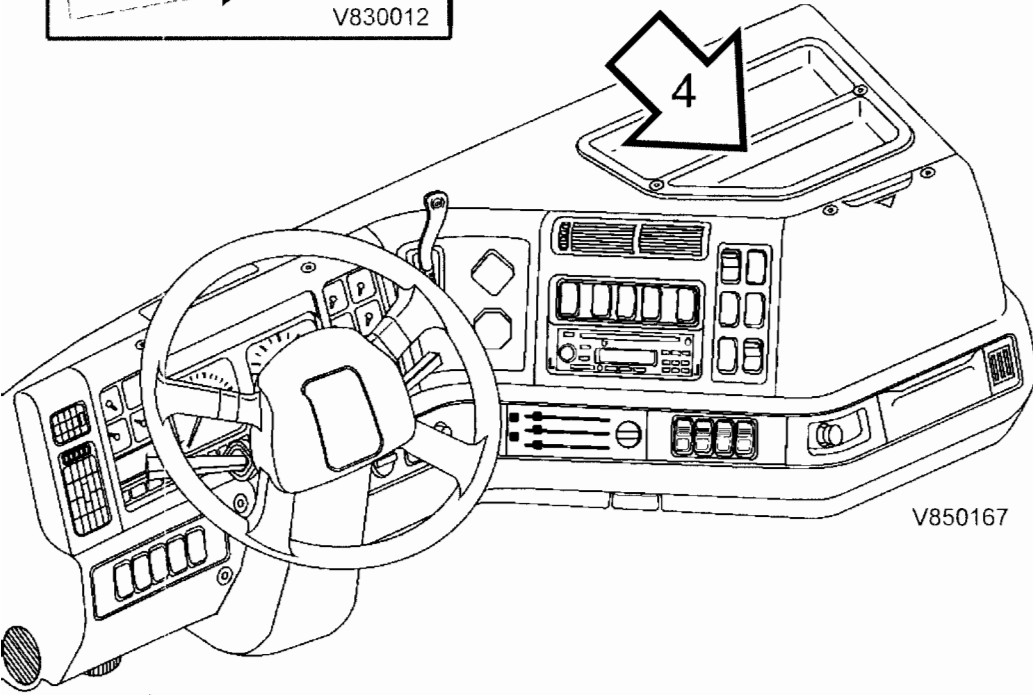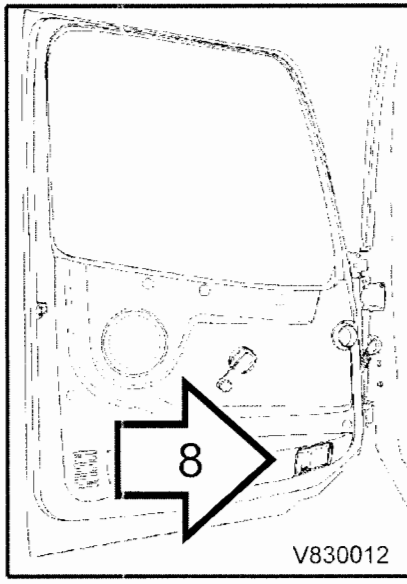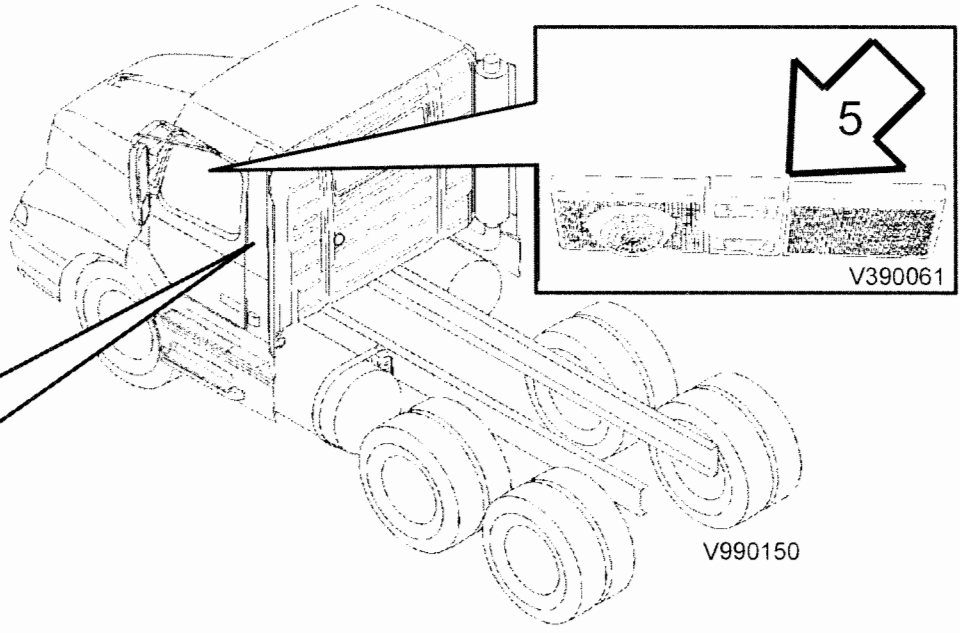


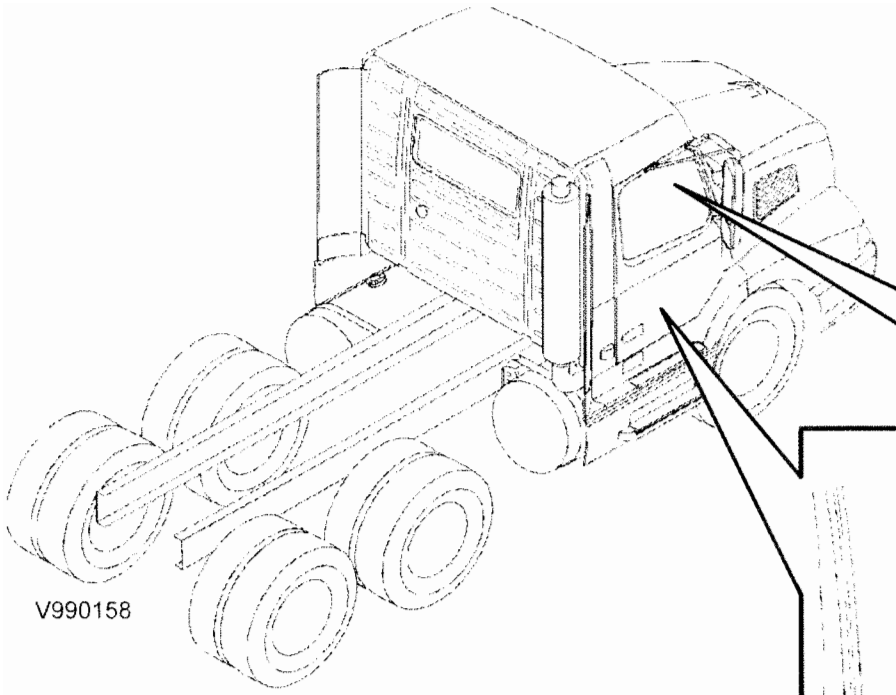


V990158

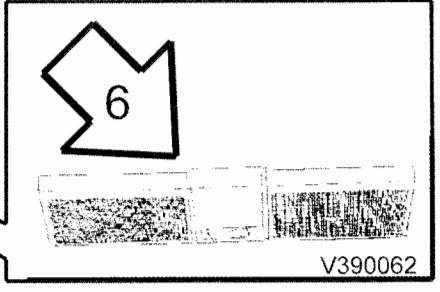

V390062

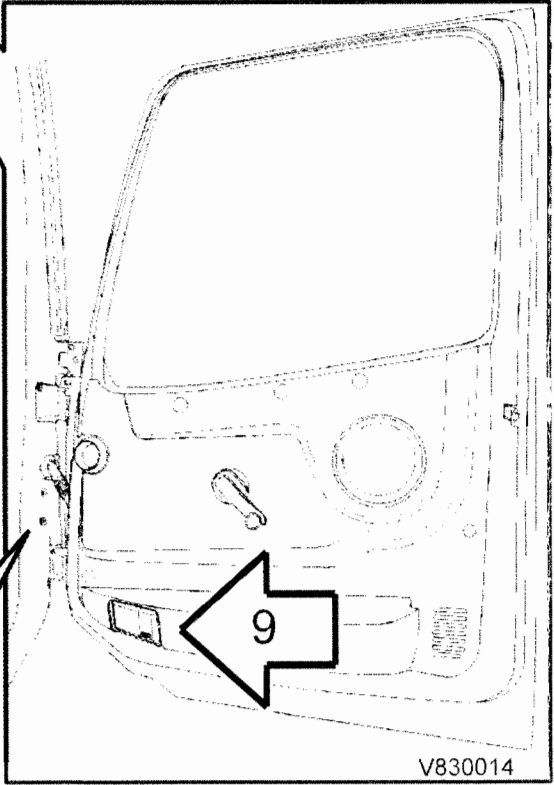

V830014

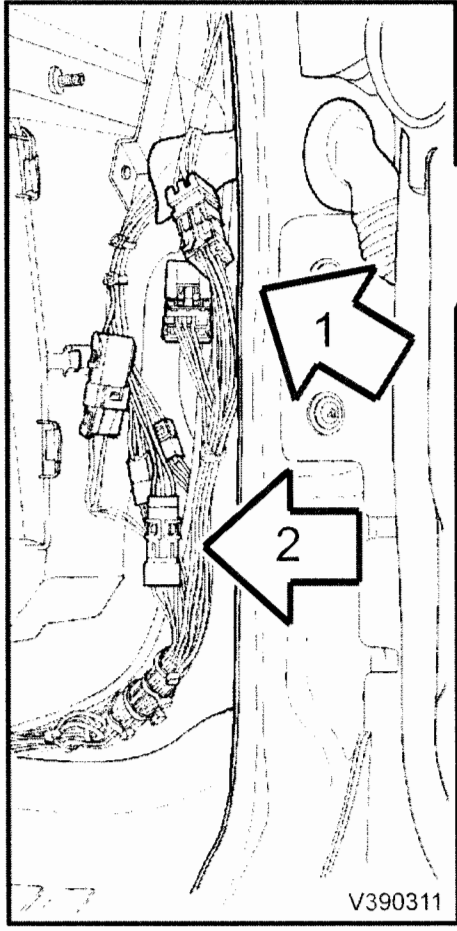

V390311