


# Service Manual Trucks

Group **37**

Electrical Schematic:  
Central Door Locks



VNL, VNM

From Build Date 2.98

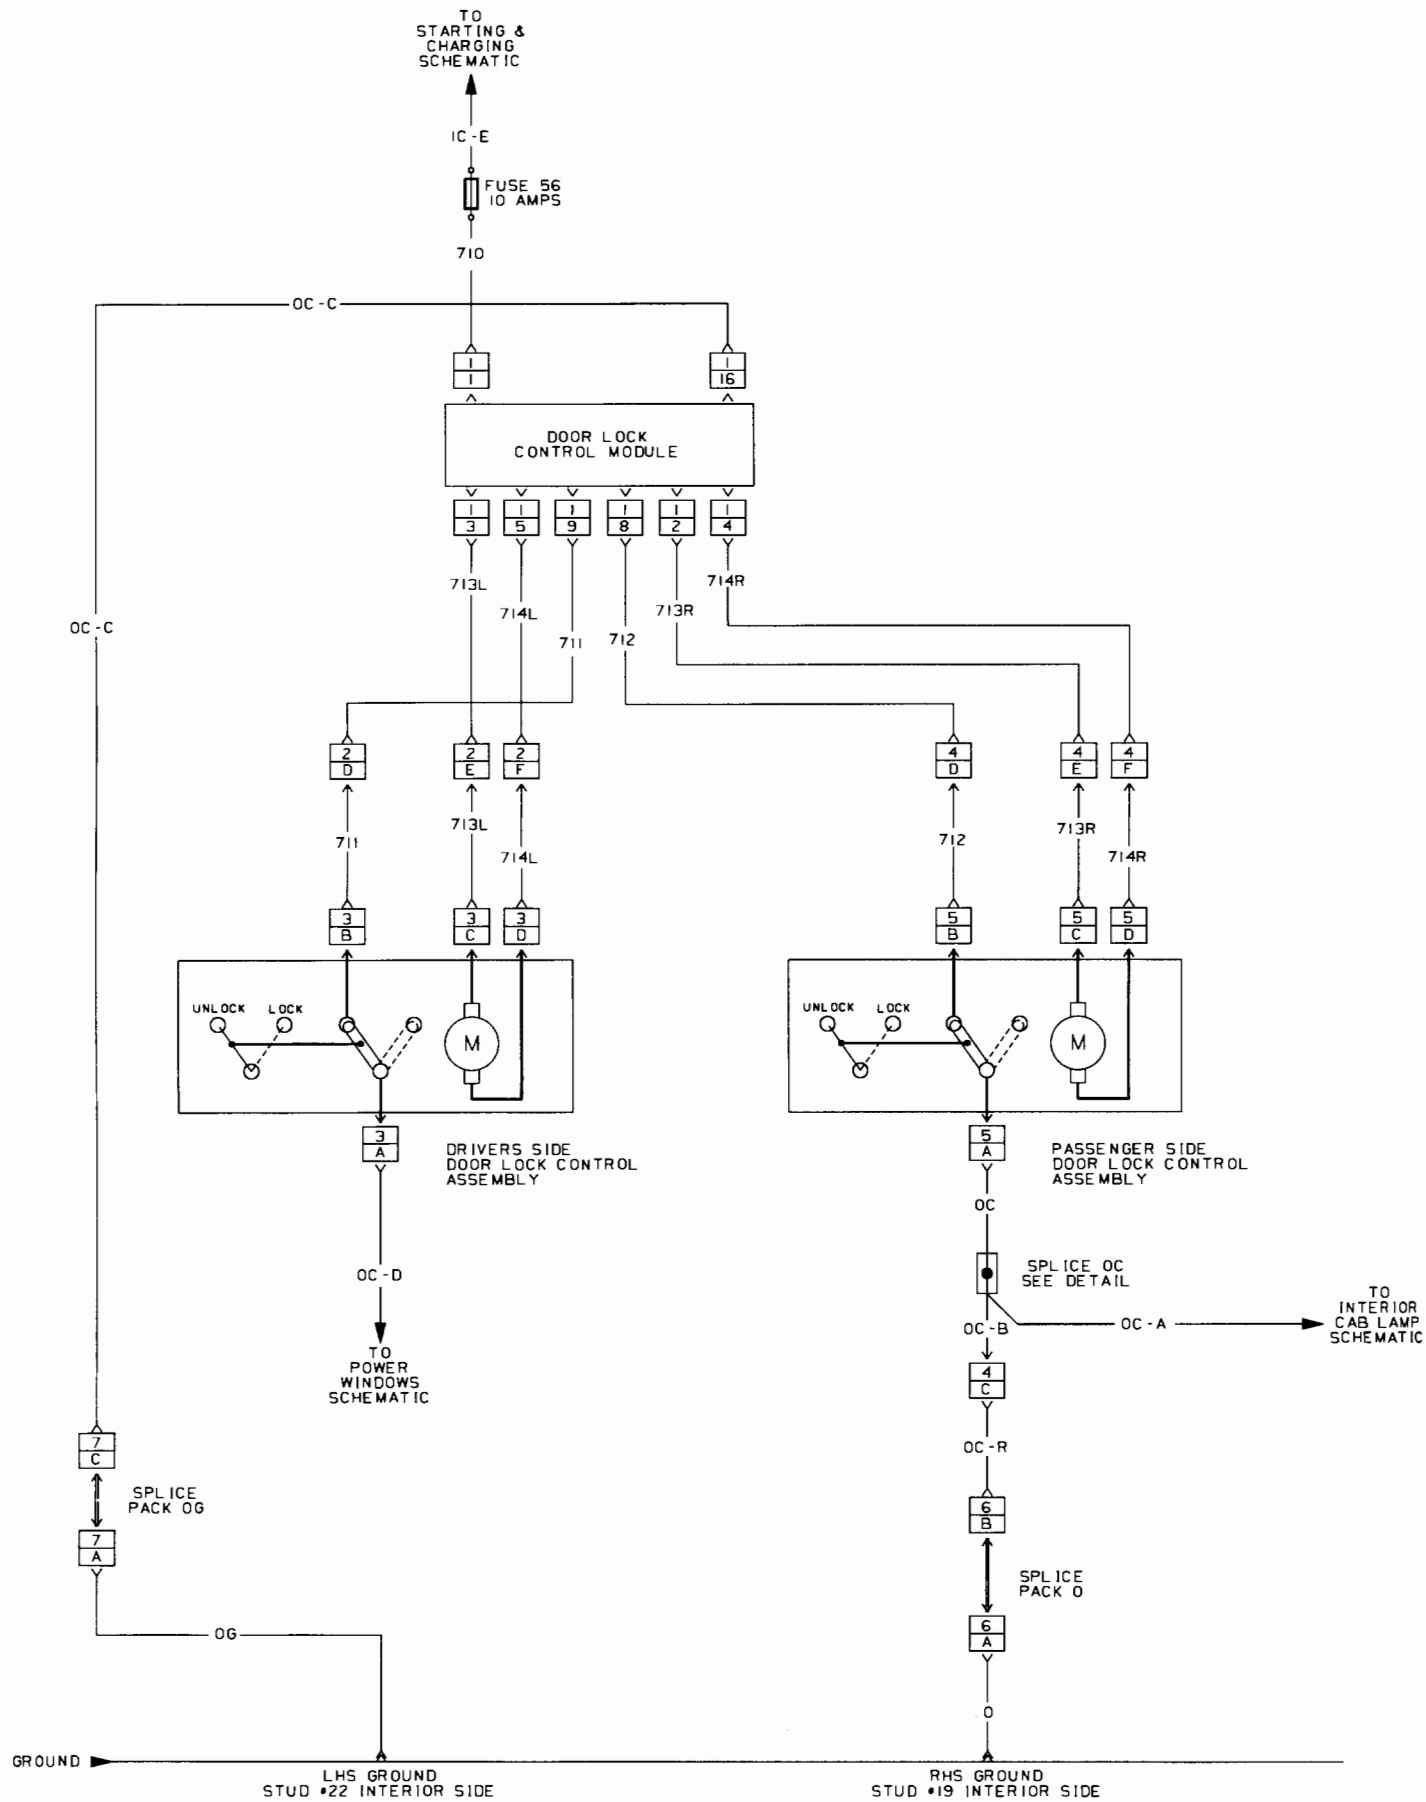

# Central Door Locks - VNL, VNM

V370578 Schematic #8083039.03

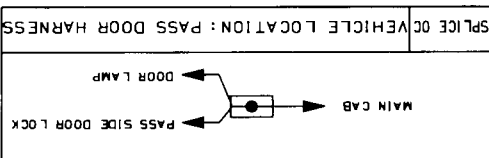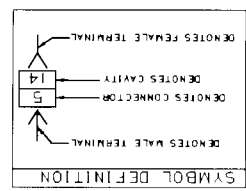

**CONNECTOR 7**  
SPICE PACK 09

CAVITY	CIRCUIT FUNCTION
A	06 GROUND
C	0C-C GROUND

**CONNECTOR 8**  
SPICE PACK 0

CAVITY	CIRCUIT FUNCTION
A	0 GROUND
B	0C-R GROUND

**CONNECTOR 5**  
PASSENGER DOOR HARNESS TO DOOR LOCK CONTROL

CAVITY	CIRCUIT FUNCTION
A	0C GROUND
B	712 GROUND CONTROL FEED
C	713R CONTROL SUPPLY
D	714R CONTROL SUPPLY

**CONNECTOR 4**  
MAIN CAB HARNESS TO DOOR HARNESS RHS

CAVITY	CIRCUIT FUNCTION
A	0C-D GROUND
B	711 GROUND CONTROL FEED
C	713L CONTROL SUPPLY
D	714L CONTROL SUPPLY

**CONNECTOR 3**  
DRIVER DOOR HARNESS TO DOOR LOCK CONTROL

CAVITY	CIRCUIT FUNCTION
A	0C-D GROUND
B	711 GROUND CONTROL FEED
C	713L CONTROL SUPPLY
E	713R CONTROL SUPPLY
F	714L CONTROL SUPPLY

**CONNECTOR 2**  
MAIN CAB HARNESS TO DOOR HARNESS LHS


CAVITY	CIRCUIT FUNCTION
C	0C-L GROUND
D	711 GROUND CONTROL FEED
E	713L CONTROL SUPPLY
F	714L CONTROL SUPPLY

**CONNECTOR 1**  
DOOR LOCK CONTROL MODULE


CAVITY	CIRCUIT FUNCTION
1	12 VOLT SUPPLY
2	713R CONTROL FEED
3	713L CONTROL FEED
4	714R CONTROL FEED
5	714L CONTROL FEED
6	712 GROUND FEED
9	711 GROUND FEED
16	0C-C GROUND

CONNECTOR AND SPICE INFORMATION  
CONNECTORS VIEWED FROM CABLE ENTRY

V390105

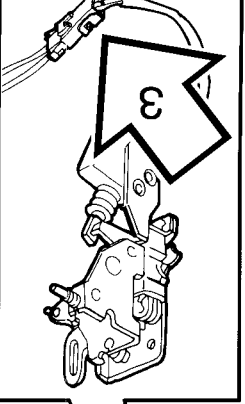

V830012

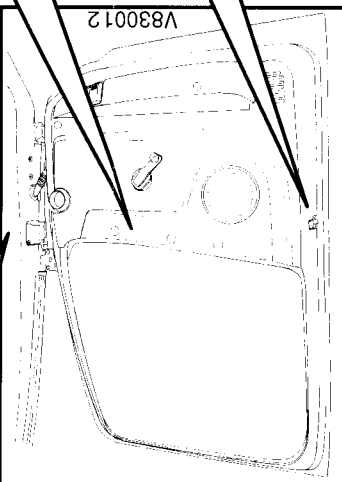


CHANGE HISTOR

DATE	DESCRIPTION	EFFECTIVE


CHANGE HISTORY

DESCRIPTION

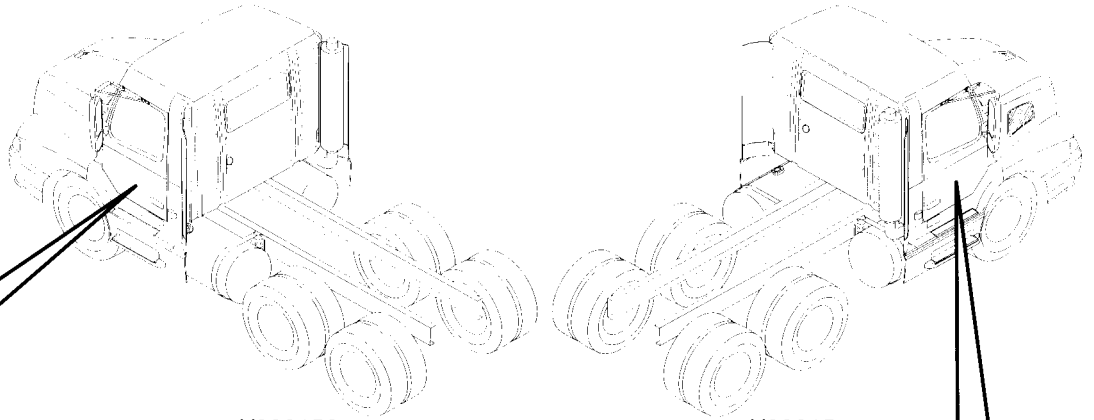


V990150


V990158

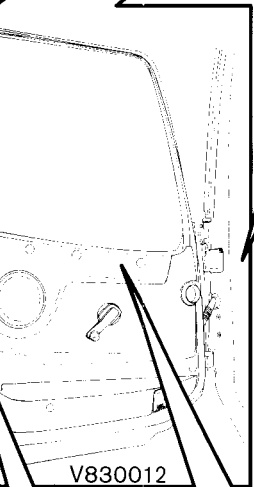


V830012

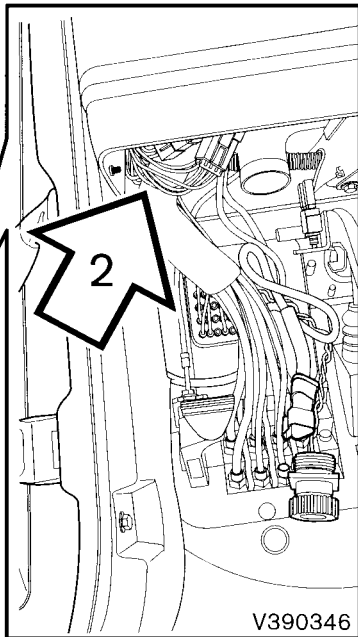


V390346

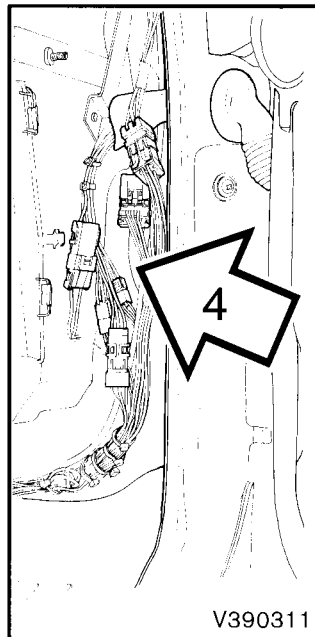


V390311

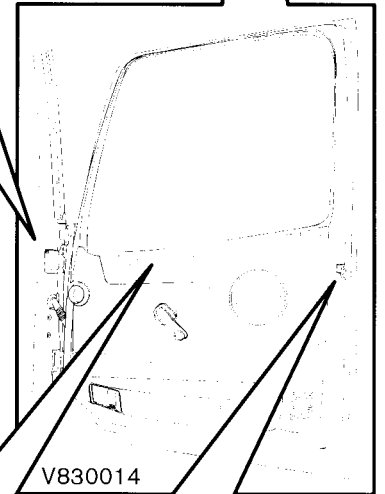


V830014

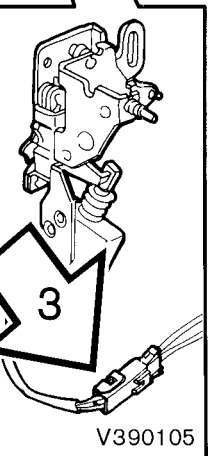


V390105

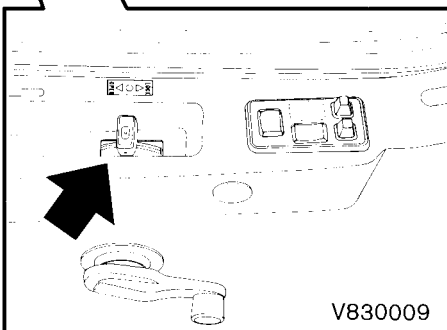


V830009

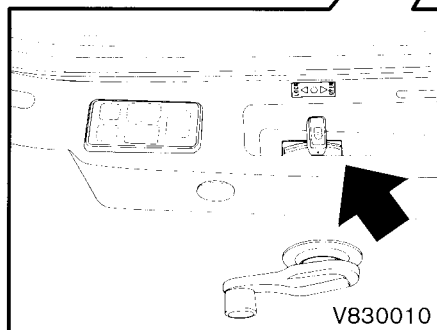


V830010

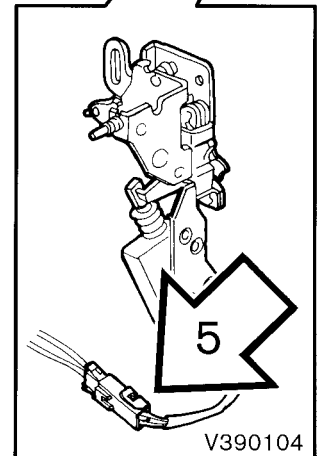


V390104

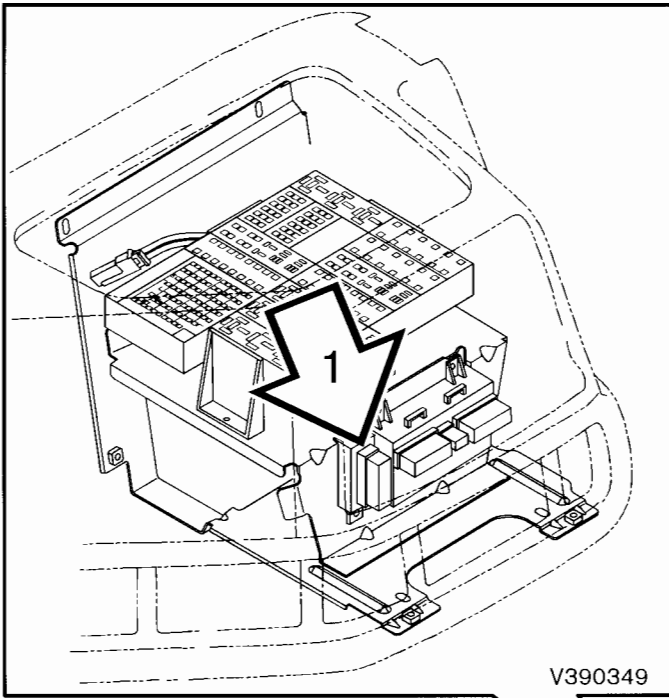


V390349

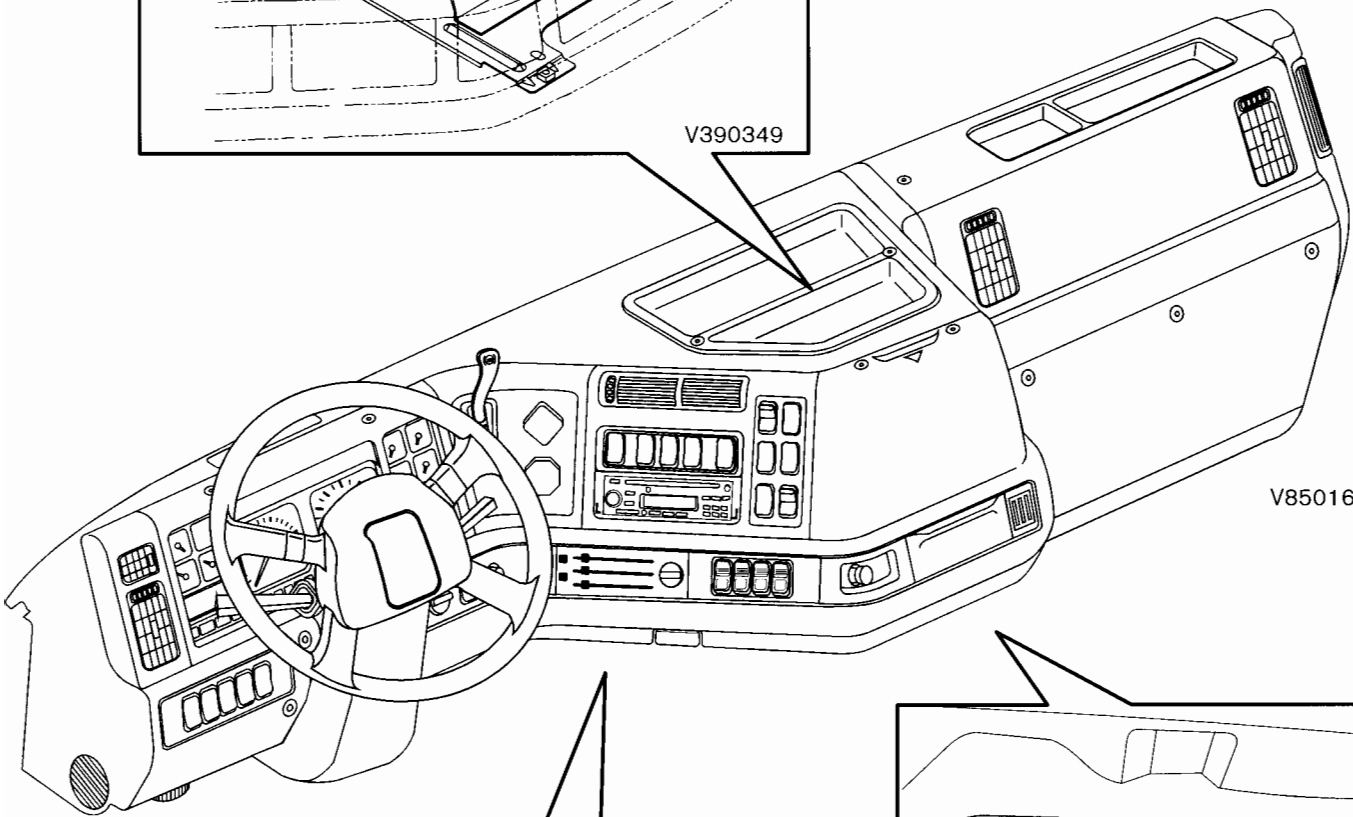

V850168

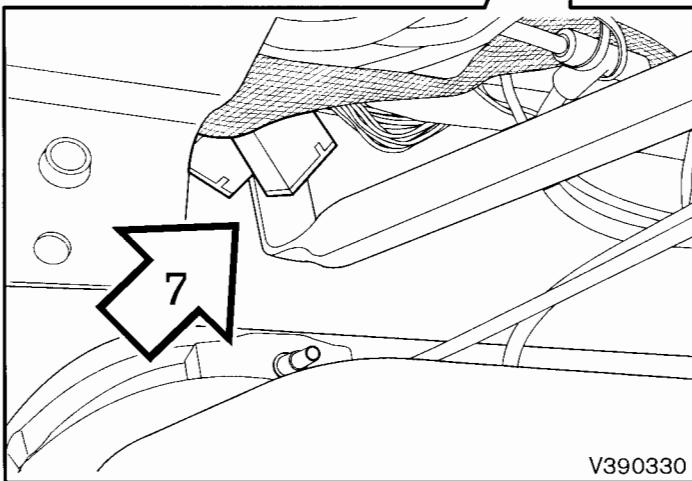

V390330

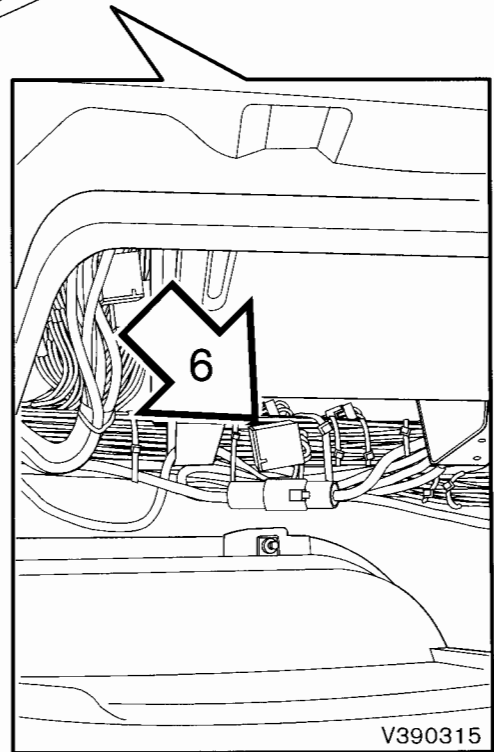

V390315