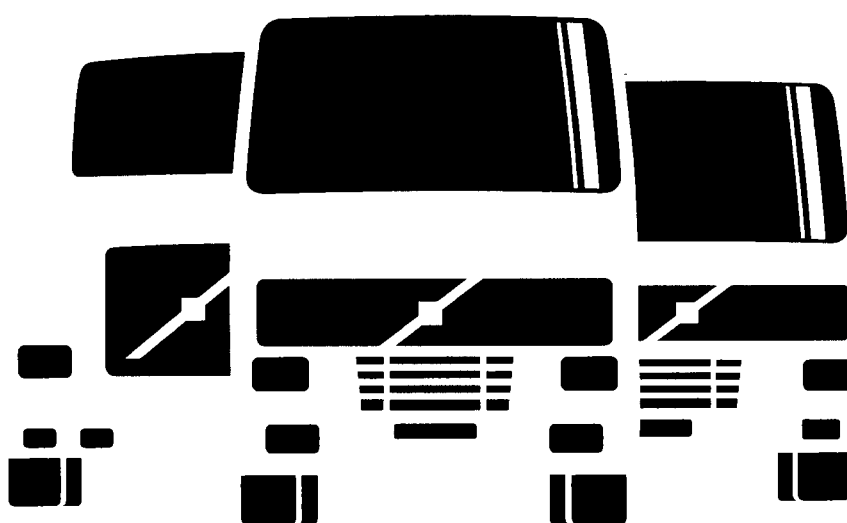
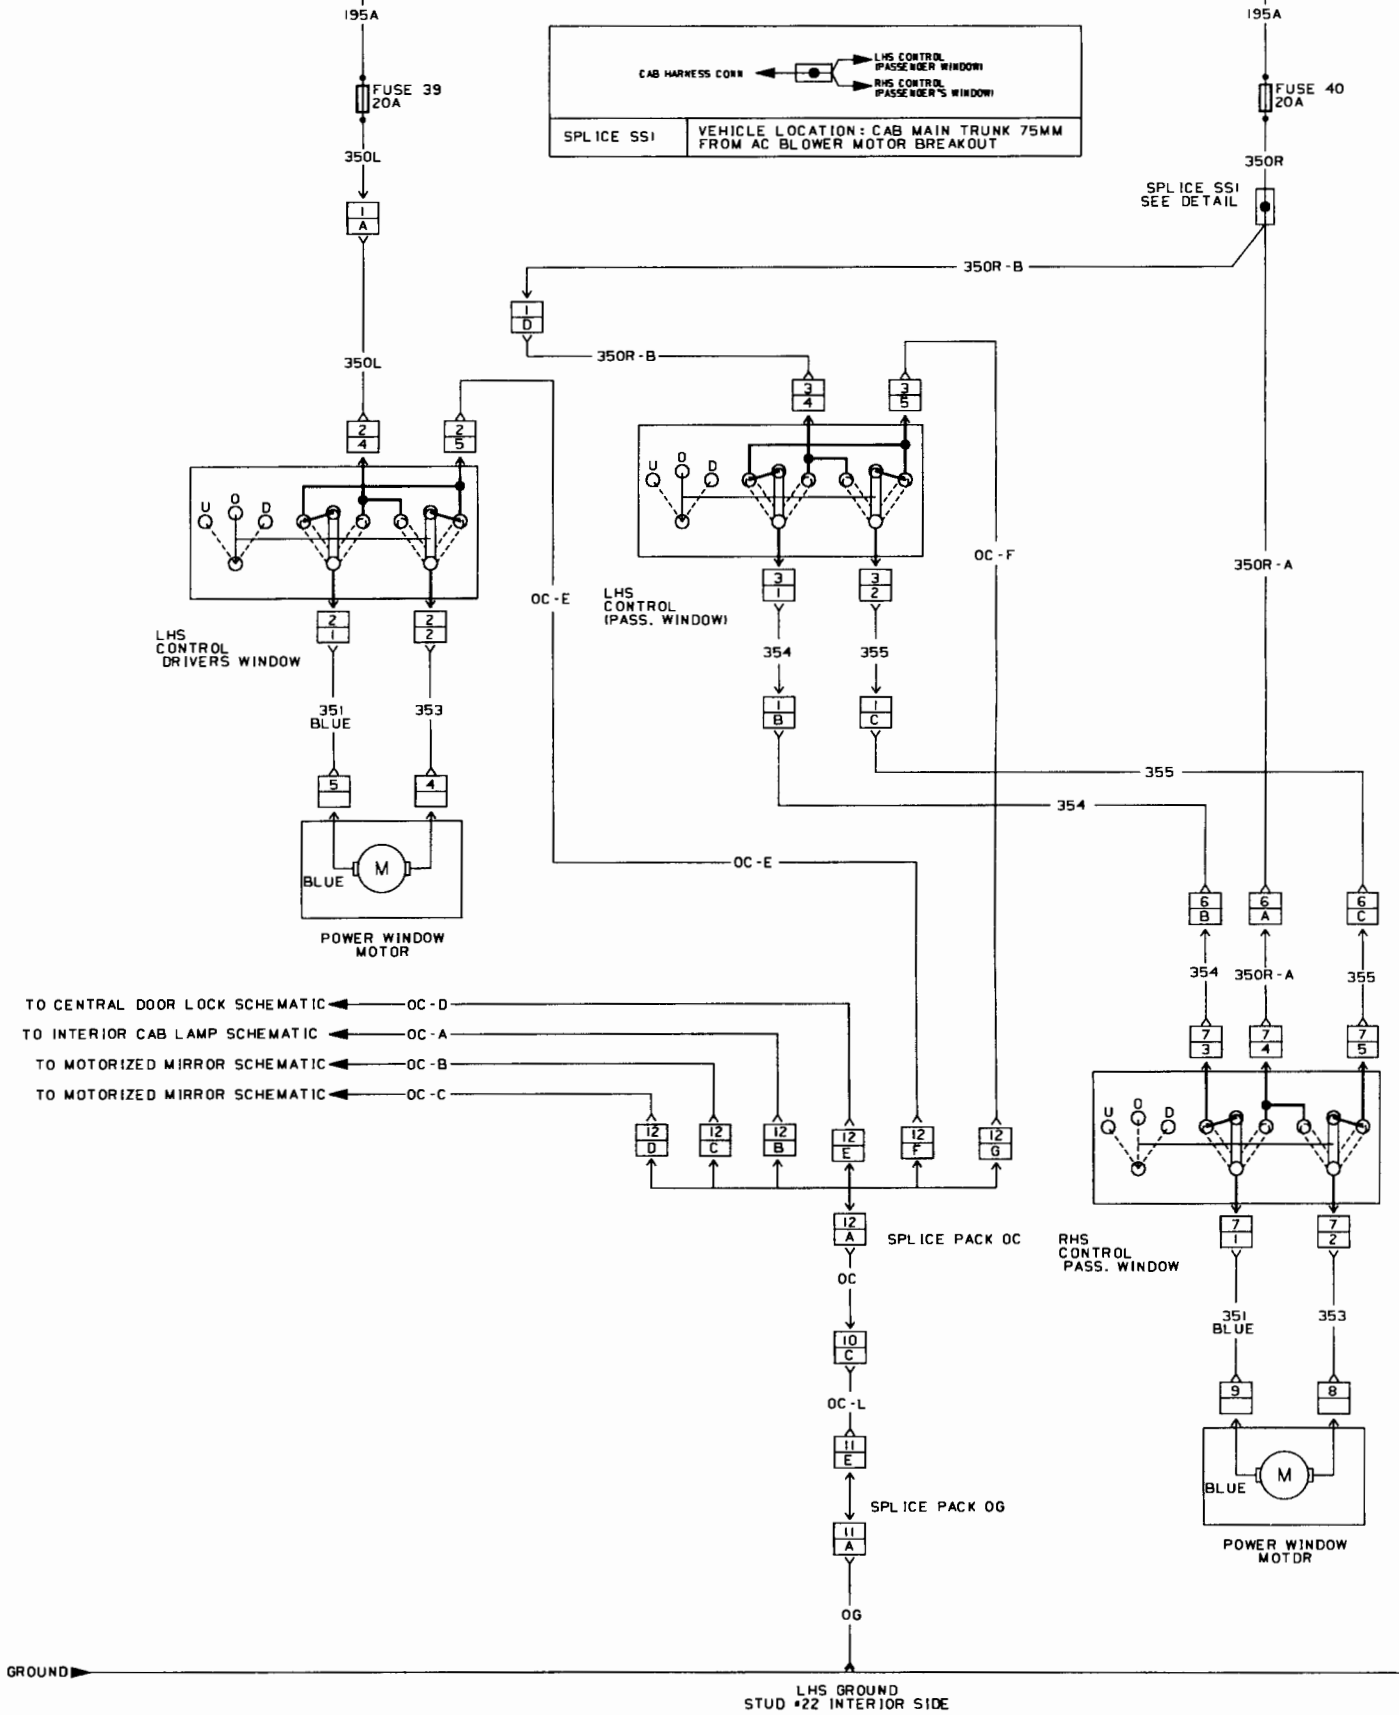


# Service Manual Trucks

Group 37  
Electrical Schematic:  
Power Windows,  
Driver Side  
VNL, VNM  
From Build Date 2.98










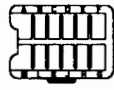

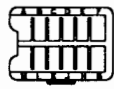


BATTERY 12 VOLT  
 IGNITION 12 VOLT  
 ACCESSORY 12 VOLT





# Power Windows, Driver Side - VNL, VNM

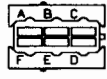**CONNECTOR AND SPLICE INFORMATION  
CONNECTORS VIEWED FROM CABLE ENTRY**

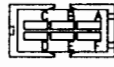



 <p><b>CONNECTOR 1 MAIN CAB TO LHS DOOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>A</td><td>350L</td><td>12 VOLT SUPPLY</td></tr> <tr><td>B</td><td>354</td><td>WINDOW DOWN FEED</td></tr> <tr><td>C</td><td>355</td><td>WINDOW UP FEED</td></tr> <tr><td>D</td><td>350R-B</td><td>12 VOLT SUPPLY</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	A	350L	12 VOLT SUPPLY	B	354	WINDOW DOWN FEED	C	355	WINDOW UP FEED	D	350R-B	12 VOLT SUPPLY	 <p><b>CONNECTOR 7 RHS CONTROL (PASS. WINDOW)</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>1</td><td>351</td><td>WINDOW DOWN FEED</td></tr> <tr><td>2</td><td>353</td><td>WINDOW UP FEED</td></tr> <tr><td>3</td><td>354</td><td>WINDOW DOWN FEED</td></tr> <tr><td>4</td><td>350R-A</td><td>12 VOLT SUPPLY</td></tr> <tr><td>5</td><td>355</td><td>WINDOW UP FEED</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	1	351	WINDOW DOWN FEED	2	353	WINDOW UP FEED	3	354	WINDOW DOWN FEED	4	350R-A	12 VOLT SUPPLY	5	355	WINDOW UP FEED			
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
A	350L	12 VOLT SUPPLY																																									
B	354	WINDOW DOWN FEED																																									
C	355	WINDOW UP FEED																																									
D	350R-B	12 VOLT SUPPLY																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
1	351	WINDOW DOWN FEED																																									
2	353	WINDOW UP FEED																																									
3	354	WINDOW DOWN FEED																																									
4	350R-A	12 VOLT SUPPLY																																									
5	355	WINDOW UP FEED																																									
 <p><b>CONNECTOR 2 LHS CONTROL (DRIVERS WINDOW)</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>1</td><td>351</td><td>WINDOW DOWN FEED</td></tr> <tr><td>2</td><td>353</td><td>WINDOW UP FEED</td></tr> <tr><td>4</td><td>350L</td><td>12 VOLT SUPPLY</td></tr> <tr><td>5</td><td>0C-E</td><td>GROUND</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	1	351	WINDOW DOWN FEED	2	353	WINDOW UP FEED	4	350L	12 VOLT SUPPLY	5	0C-E	GROUND	 <p><b>CONNECTOR 8 RHS POWER WINDOW MOTOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>353</td><td></td><td>WINDOW UP FEED</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	353		WINDOW UP FEED															
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
1	351	WINDOW DOWN FEED																																									
2	353	WINDOW UP FEED																																									
4	350L	12 VOLT SUPPLY																																									
5	0C-E	GROUND																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
353		WINDOW UP FEED																																									
 <p><b>CONNECTOR 3 LHS CONTROL (PASS. WINDOW)</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>1</td><td>354</td><td>WINDOW DOWN FEED</td></tr> <tr><td>2</td><td>355</td><td>WINDOW UP FEED</td></tr> <tr><td>4</td><td>350R-B</td><td>12 VOLT SUPPLY</td></tr> <tr><td>5</td><td>0C-F</td><td>GROUND</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	1	354	WINDOW DOWN FEED	2	355	WINDOW UP FEED	4	350R-B	12 VOLT SUPPLY	5	0C-F	GROUND	 <p><b>CONNECTOR 9 RHS POWER WINDOW MOTOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>351</td><td></td><td>CLOSE CIRCUIT</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	351		CLOSE CIRCUIT															
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
1	354	WINDOW DOWN FEED																																									
2	355	WINDOW UP FEED																																									
4	350R-B	12 VOLT SUPPLY																																									
5	0C-F	GROUND																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
351		CLOSE CIRCUIT																																									
 <p><b>CONNECTOR 4 LHS POWER WINDOW MOTOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>353</td><td></td><td>WINDOW UP FEED</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	353		WINDOW UP FEED	 <p><b>CONNECTOR 10 MAIN CAB TO DOOR HARNESS (LHS)</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>C</td><td>0C</td><td>GROUND</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	C	0C	GROUND																								
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
353		WINDOW UP FEED																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
C	0C	GROUND																																									
 <p><b>CONNECTOR 5 LHS POWER WINDOW MOTOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>351</td><td></td><td>WINDOW DOWN FEED</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	351		WINDOW DOWN FEED	 <p><b>CONNECTOR 11 SPLICE PACK 08</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>A</td><td>0G</td><td>GROUND</td></tr> <tr><td>E</td><td>0C-L</td><td>GROUND</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	A	0G	GROUND	E	0C-L	GROUND																					
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
351		WINDOW DOWN FEED																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
A	0G	GROUND																																									
E	0C-L	GROUND																																									
 <p><b>CONNECTOR 6 MAIN CAB TO RHS DOOR</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>A</td><td>350R-A</td><td>12 VOLT SUPPLY</td></tr> <tr><td>B</td><td>354</td><td>WINDOW DOWN FEED</td></tr> <tr><td>C</td><td>355</td><td>WINDOW UP FEED</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	A	350R-A	12 VOLT SUPPLY	B	354	WINDOW DOWN FEED	C	355	WINDOW UP FEED	 <p><b>CONNECTOR 12 SPLICE PACK 0C</b></p> <table border="1"> <thead> <tr><th colspan="3">TABLE OF CONTENTS</th></tr> <tr><th>CAVITY</th><th>CIRCUIT</th><th>FUNCTION</th></tr> </thead> <tbody> <tr><td>A</td><td>0C</td><td>GROUND</td></tr> <tr><td>B</td><td>0C-A</td><td>GROUND</td></tr> <tr><td>C</td><td>0C-B</td><td>GROUND</td></tr> <tr><td>D</td><td>0C-C</td><td>GROUND</td></tr> <tr><td>E</td><td>0C-D</td><td>GROUND</td></tr> <tr><td>F</td><td>0C-E</td><td>GROUND</td></tr> <tr><td>G</td><td>0C-F</td><td>GROUND</td></tr> </tbody> </table>	TABLE OF CONTENTS			CAVITY	CIRCUIT	FUNCTION	A	0C	GROUND	B	0C-A	GROUND	C	0C-B	GROUND	D	0C-C	GROUND	E	0C-D	GROUND	F	0C-E	GROUND	G	0C-F	GROUND
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
A	350R-A	12 VOLT SUPPLY																																									
B	354	WINDOW DOWN FEED																																									
C	355	WINDOW UP FEED																																									
TABLE OF CONTENTS																																											
CAVITY	CIRCUIT	FUNCTION																																									
A	0C	GROUND																																									
B	0C-A	GROUND																																									
C	0C-B	GROUND																																									
D	0C-C	GROUND																																									
E	0C-D	GROUND																																									
F	0C-E	GROUND																																									
G	0C-F	GROUND																																									

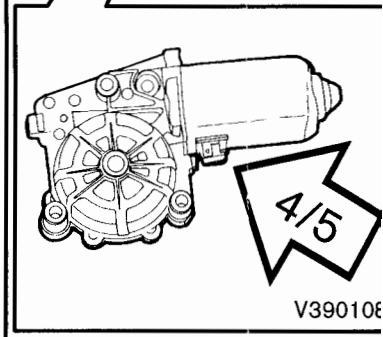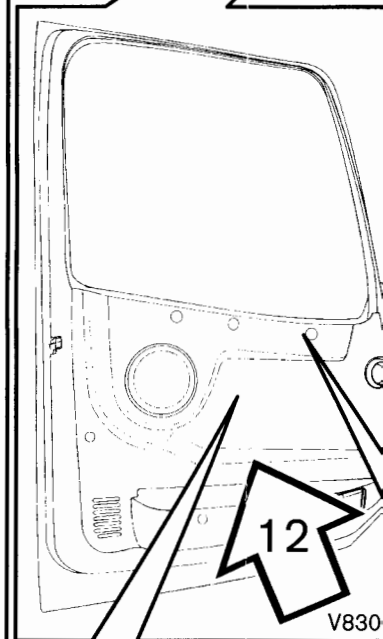**CHANGE HISTORY**


EFFECTIVE DATE	DESCRIPTION




**SYMBOL DEFINITION**

	DENOTES MALE TERMINAL
	DENOTES CONNECTOR
	DENOTES CAVITY
	DENOTES FEMALE TERMINAL



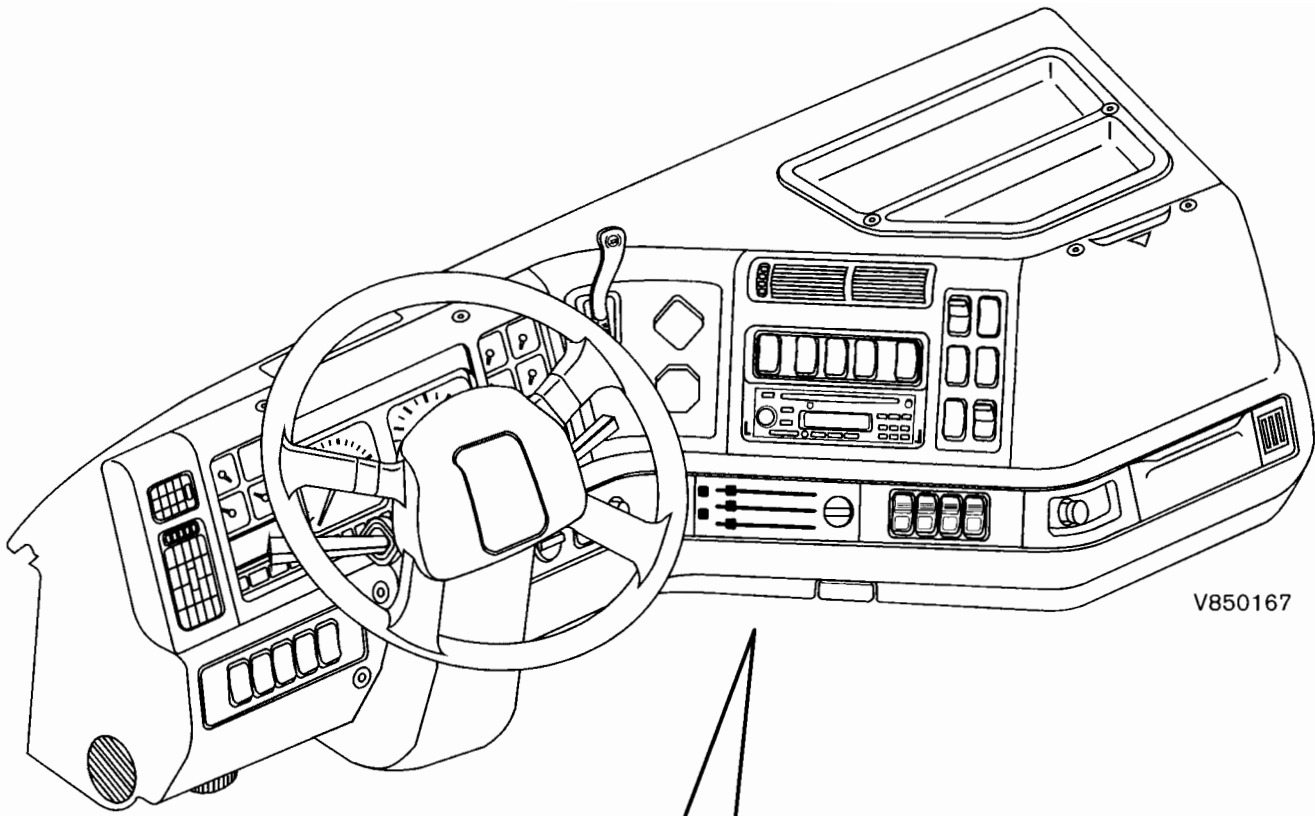

V850167

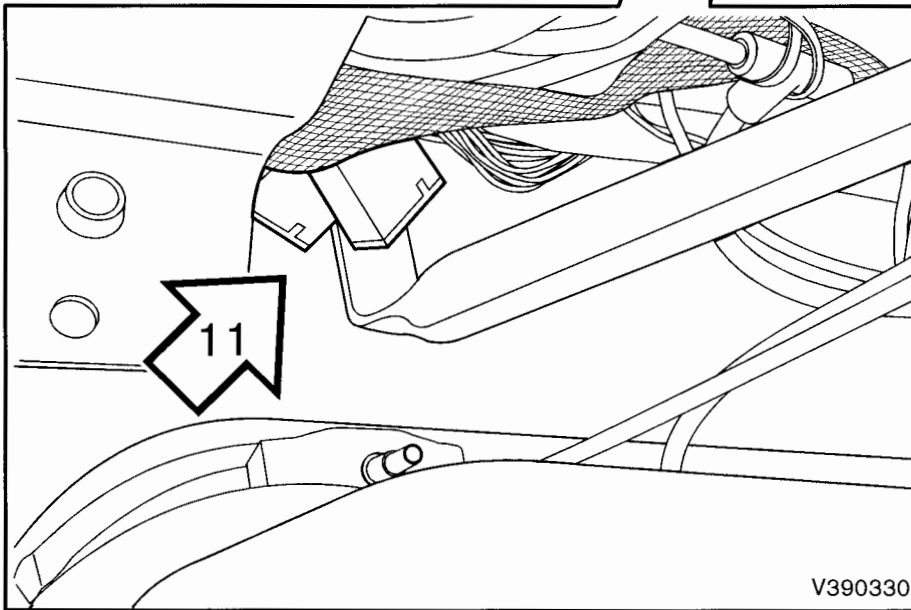

V390330